



Only numbered Service Parts
are available.

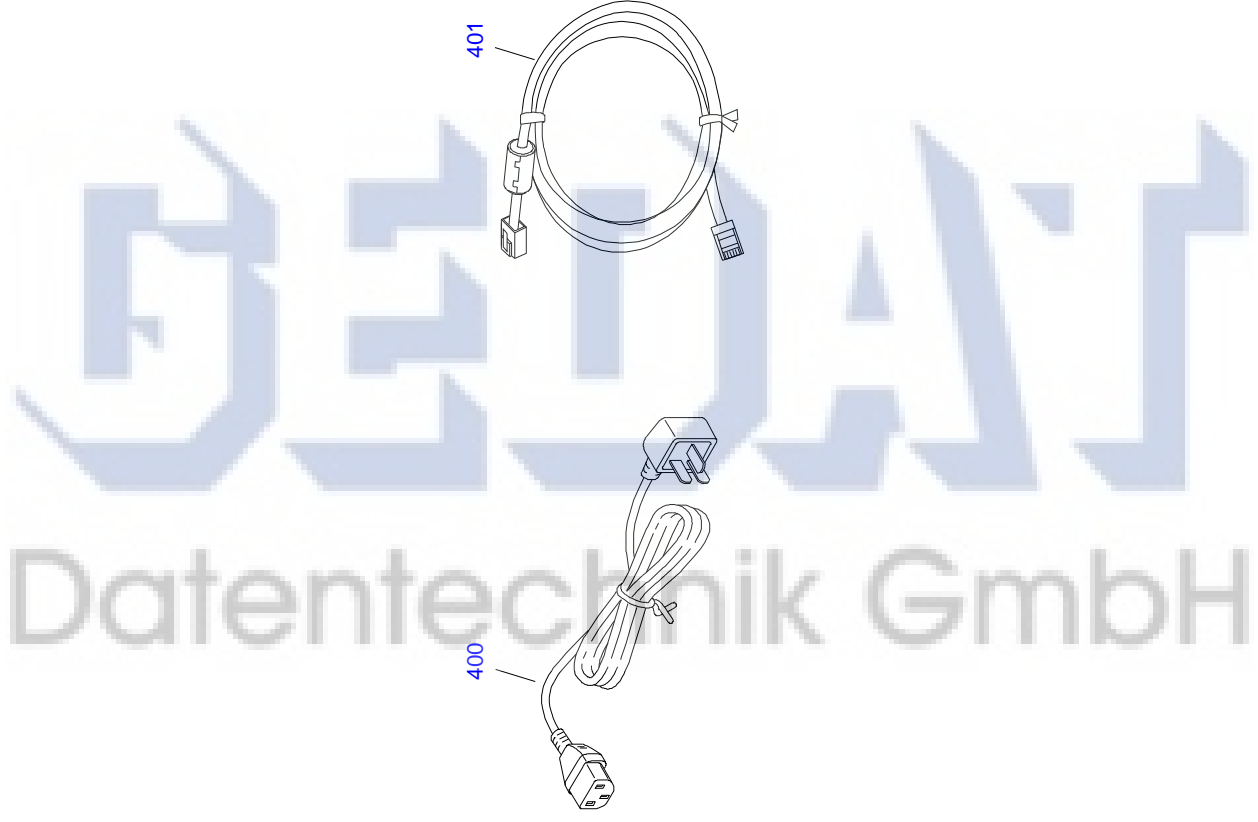

Only numbered Service Parts
are available.

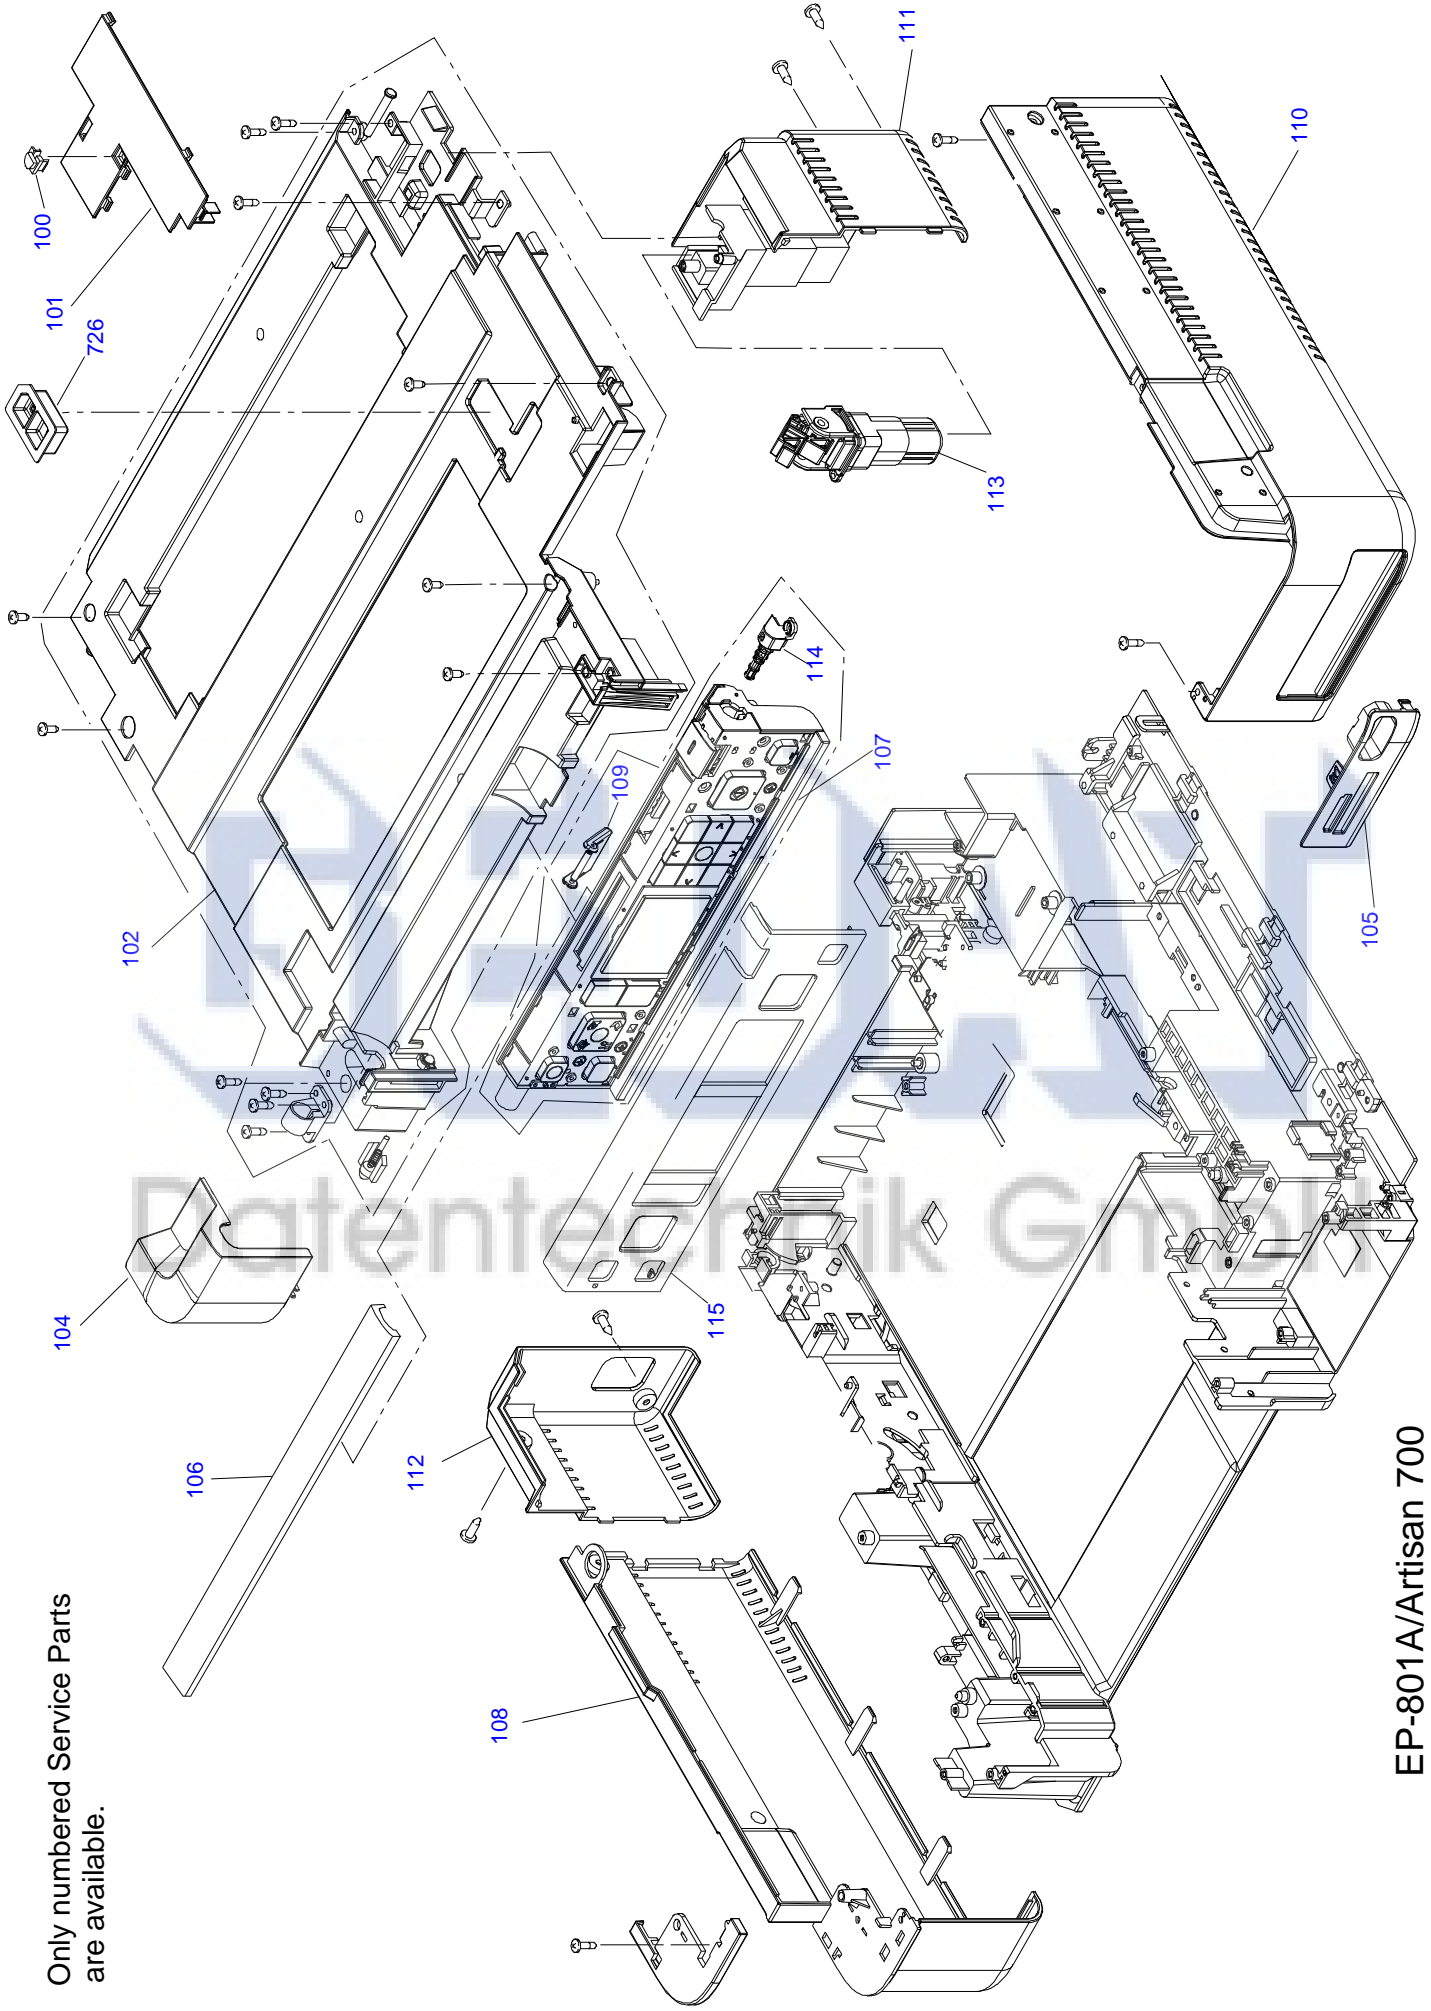


EP-801A/Artisan 700



EPSON STYLUS PHOTO PX700W/TX700W No.02

Rev.02 CA30-CASE-012


Only numbered Service Parts
are available.

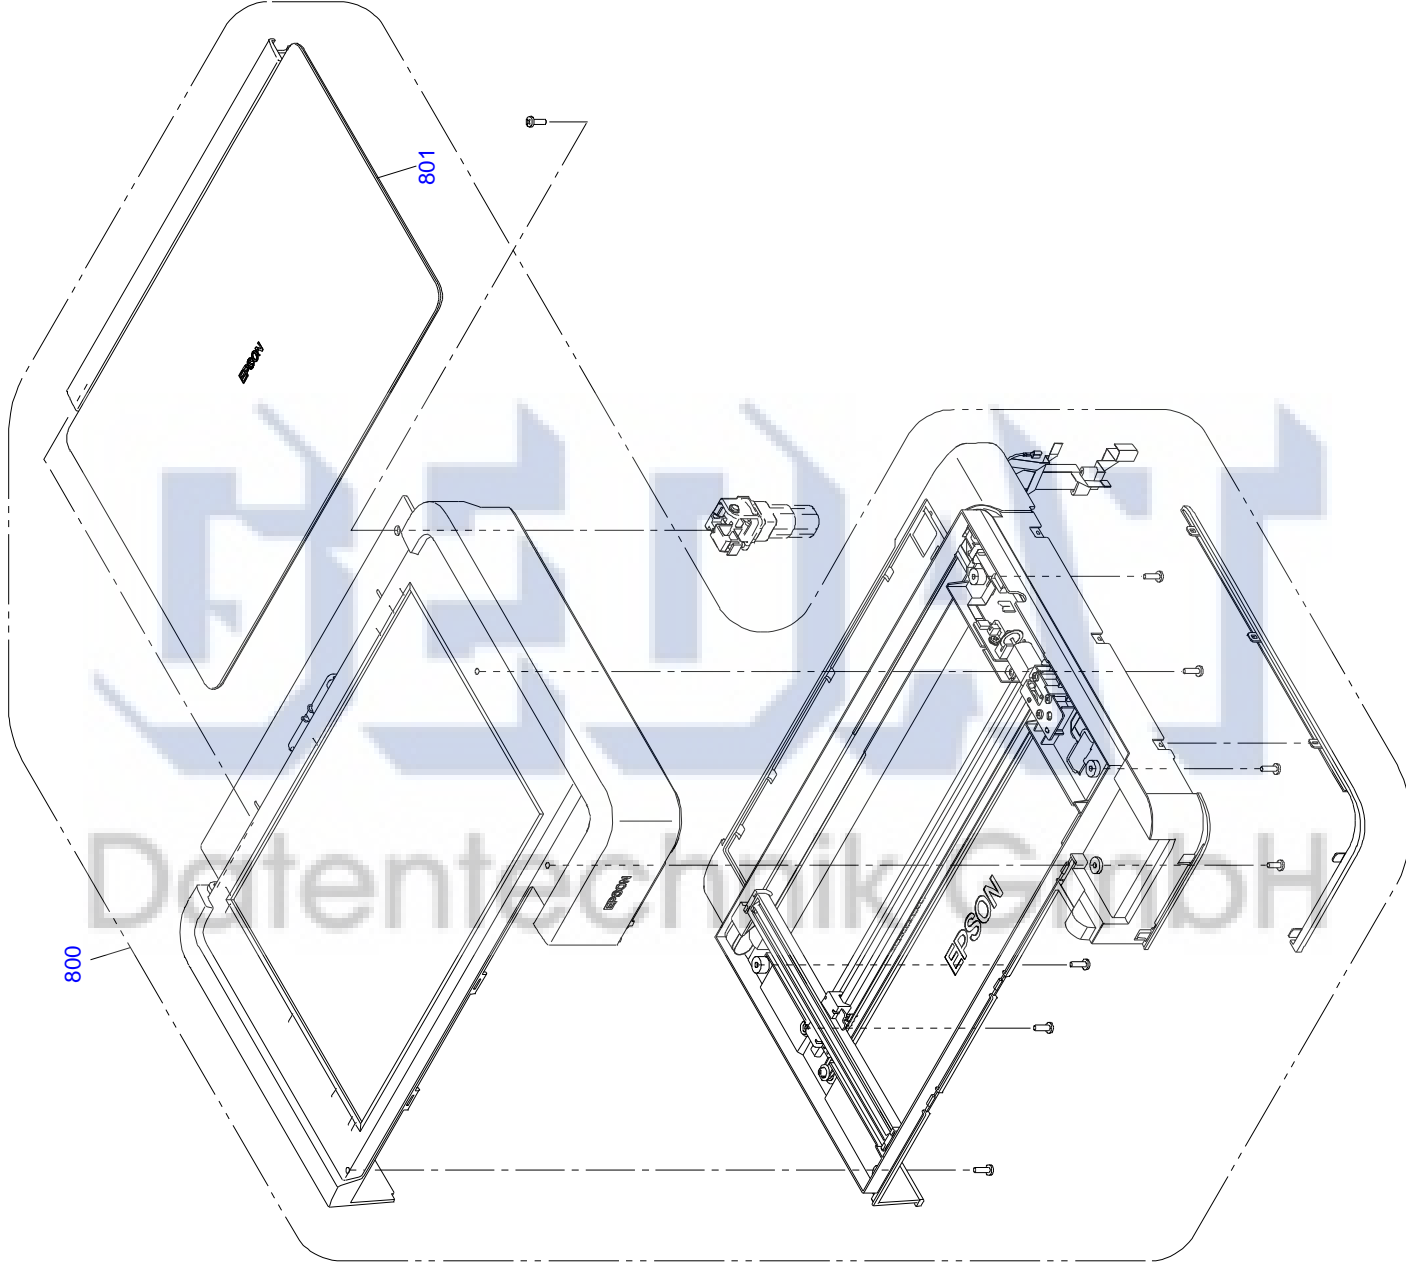


Only numbered Service Parts
are available.

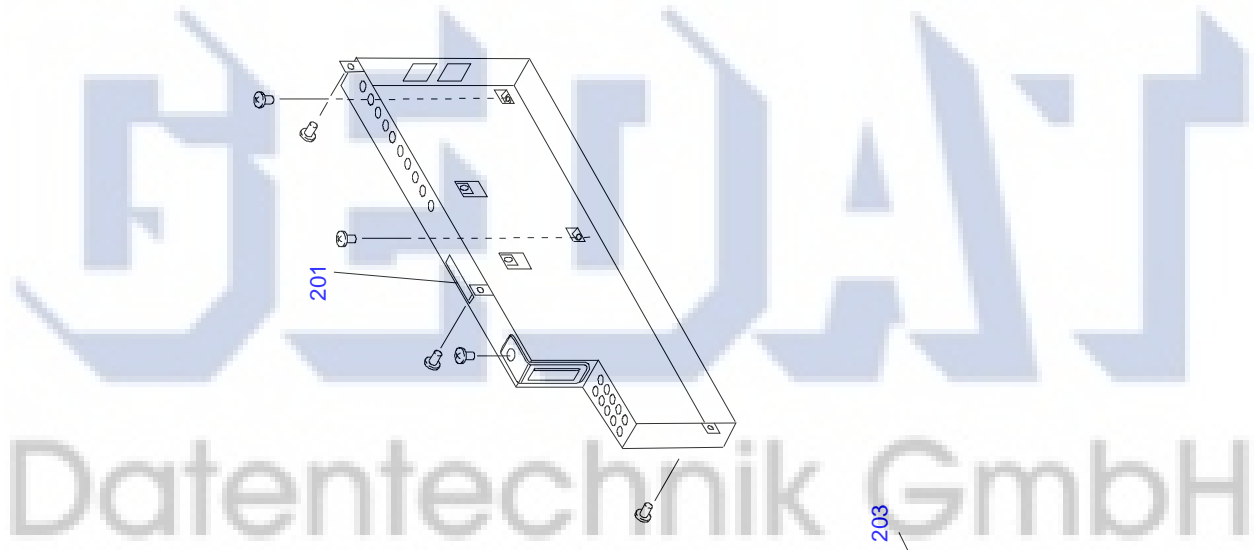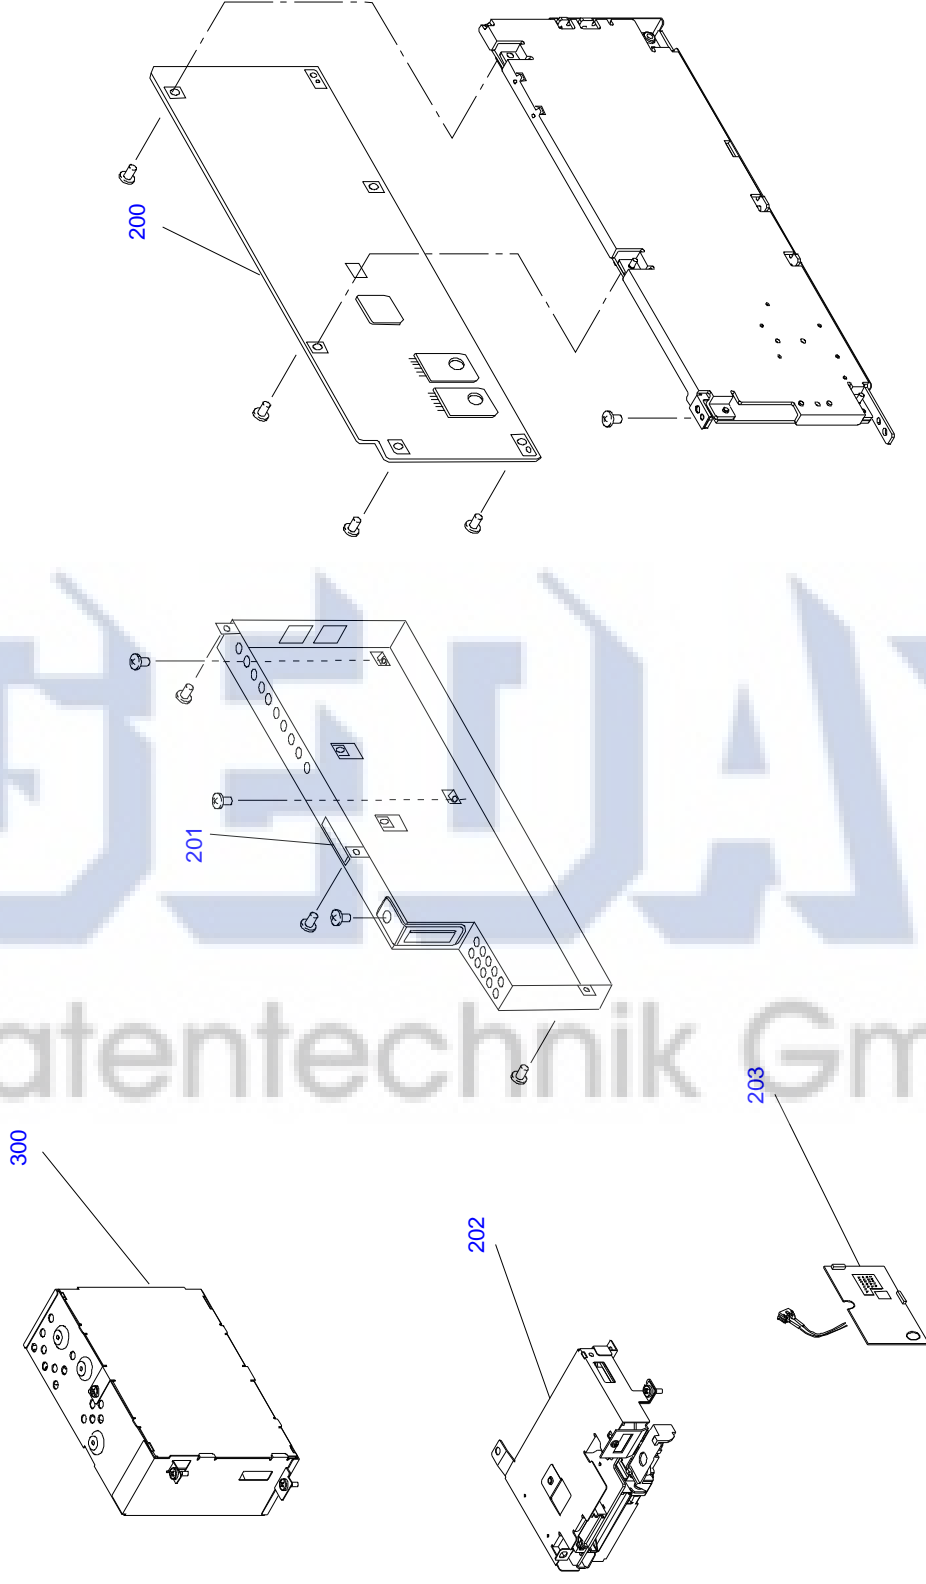

Only numbered Service Parts
are available.

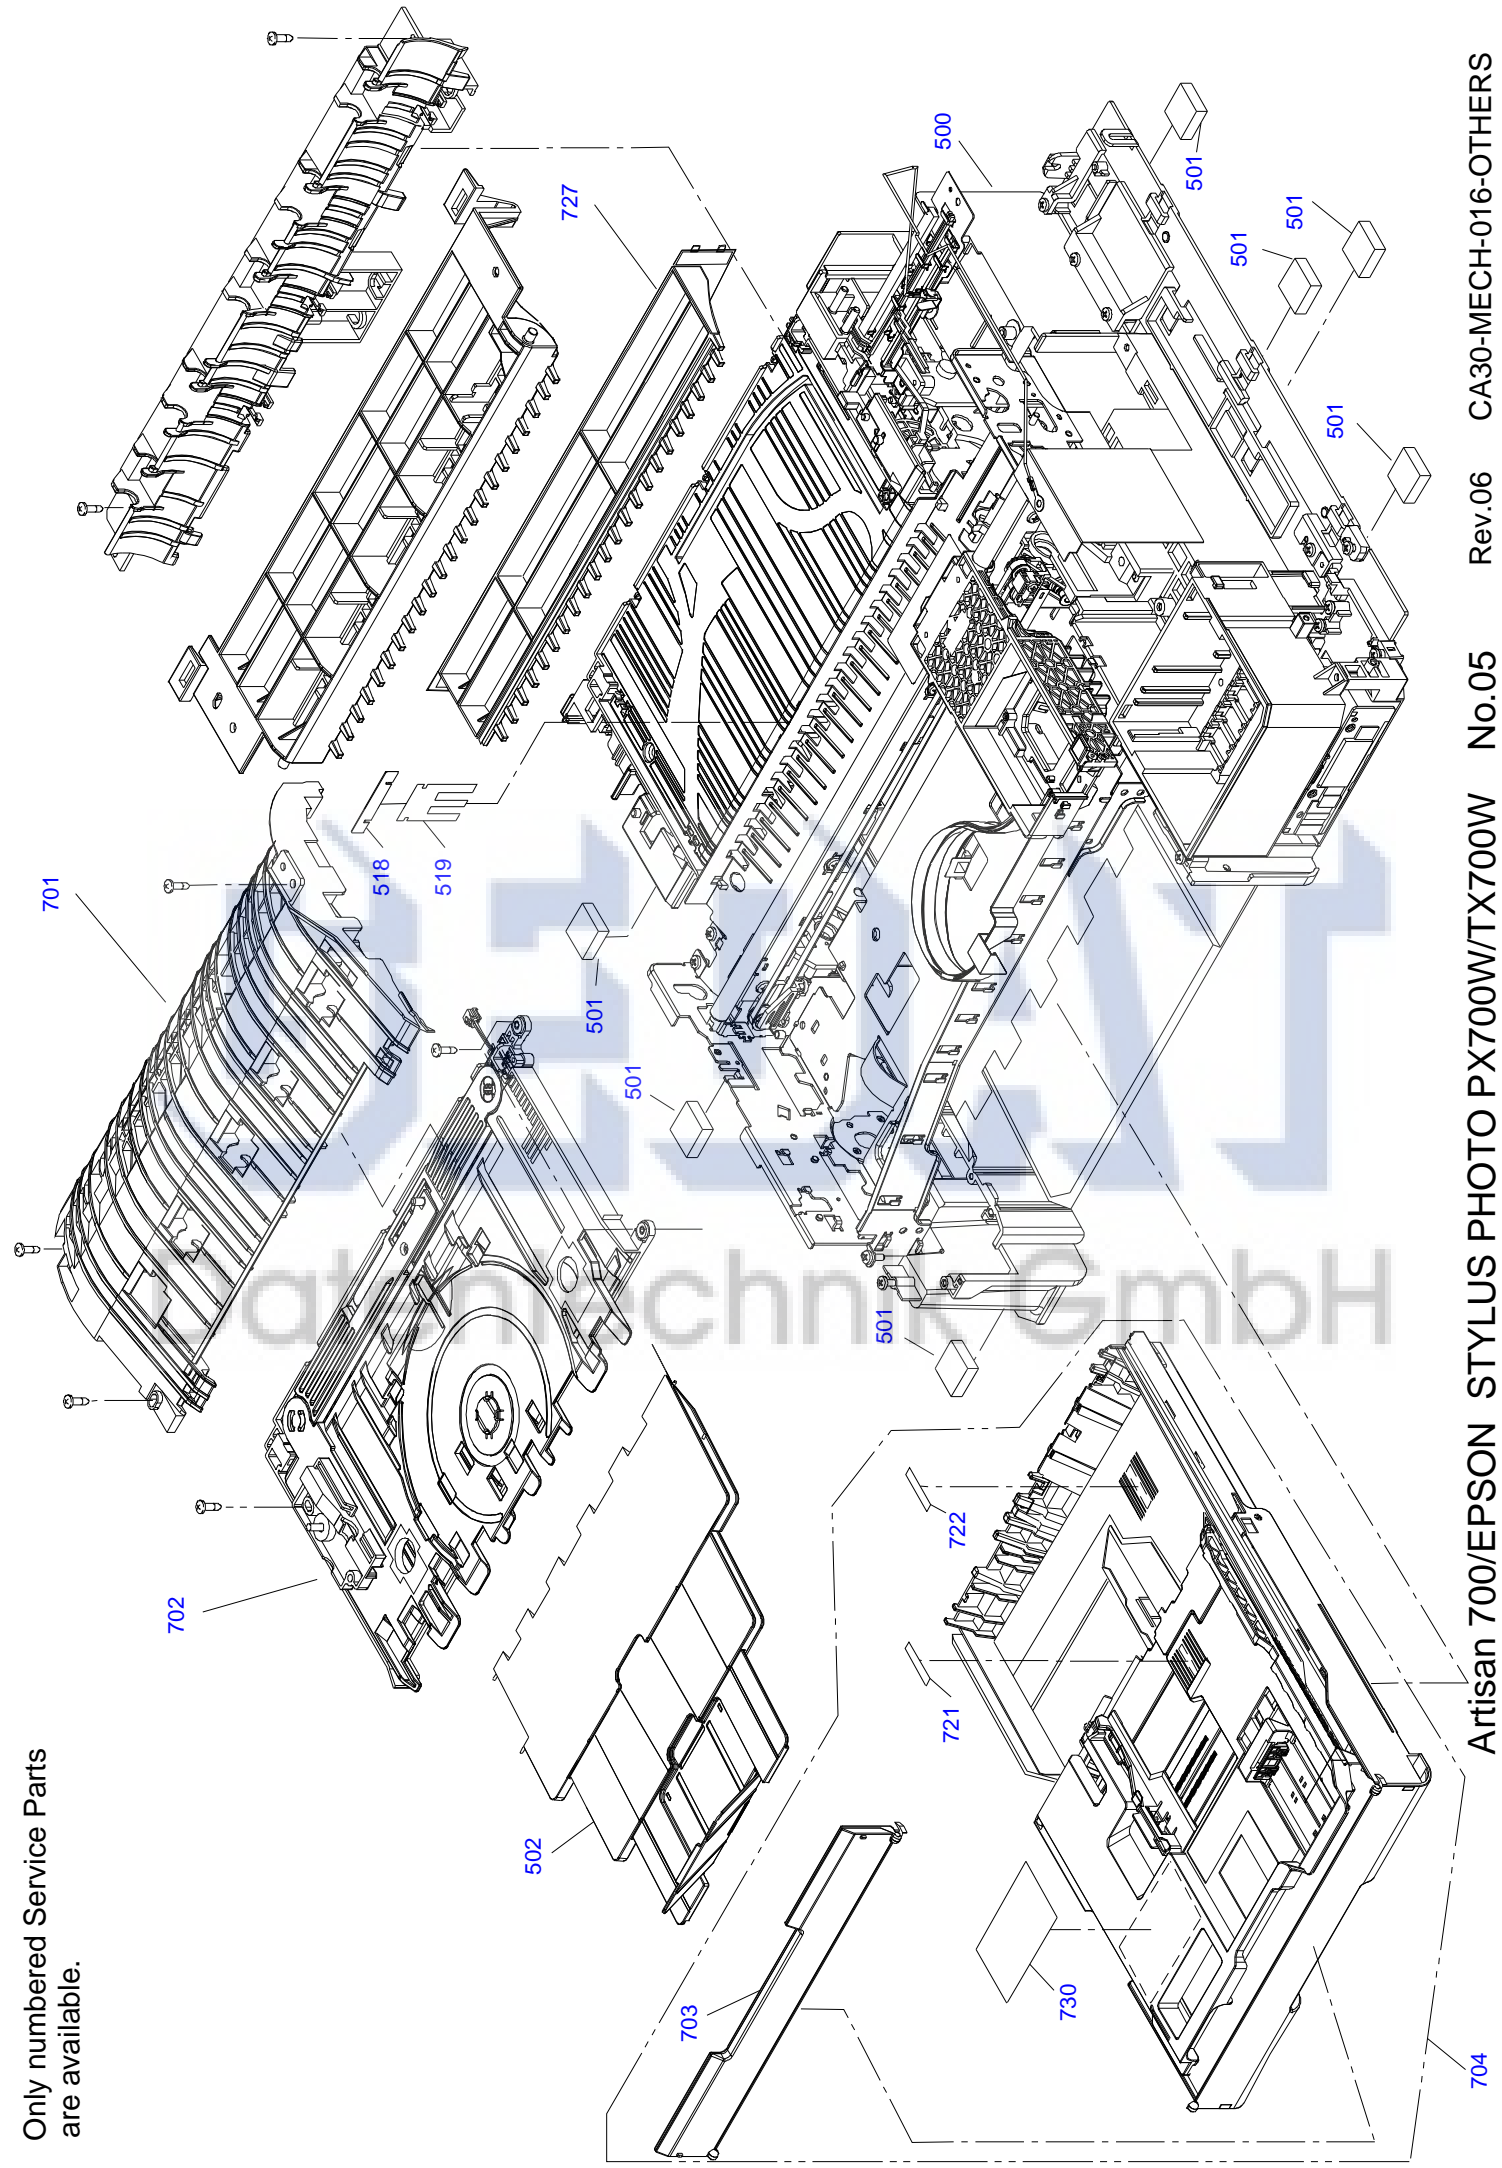

Only numbered Service Parts
are available.

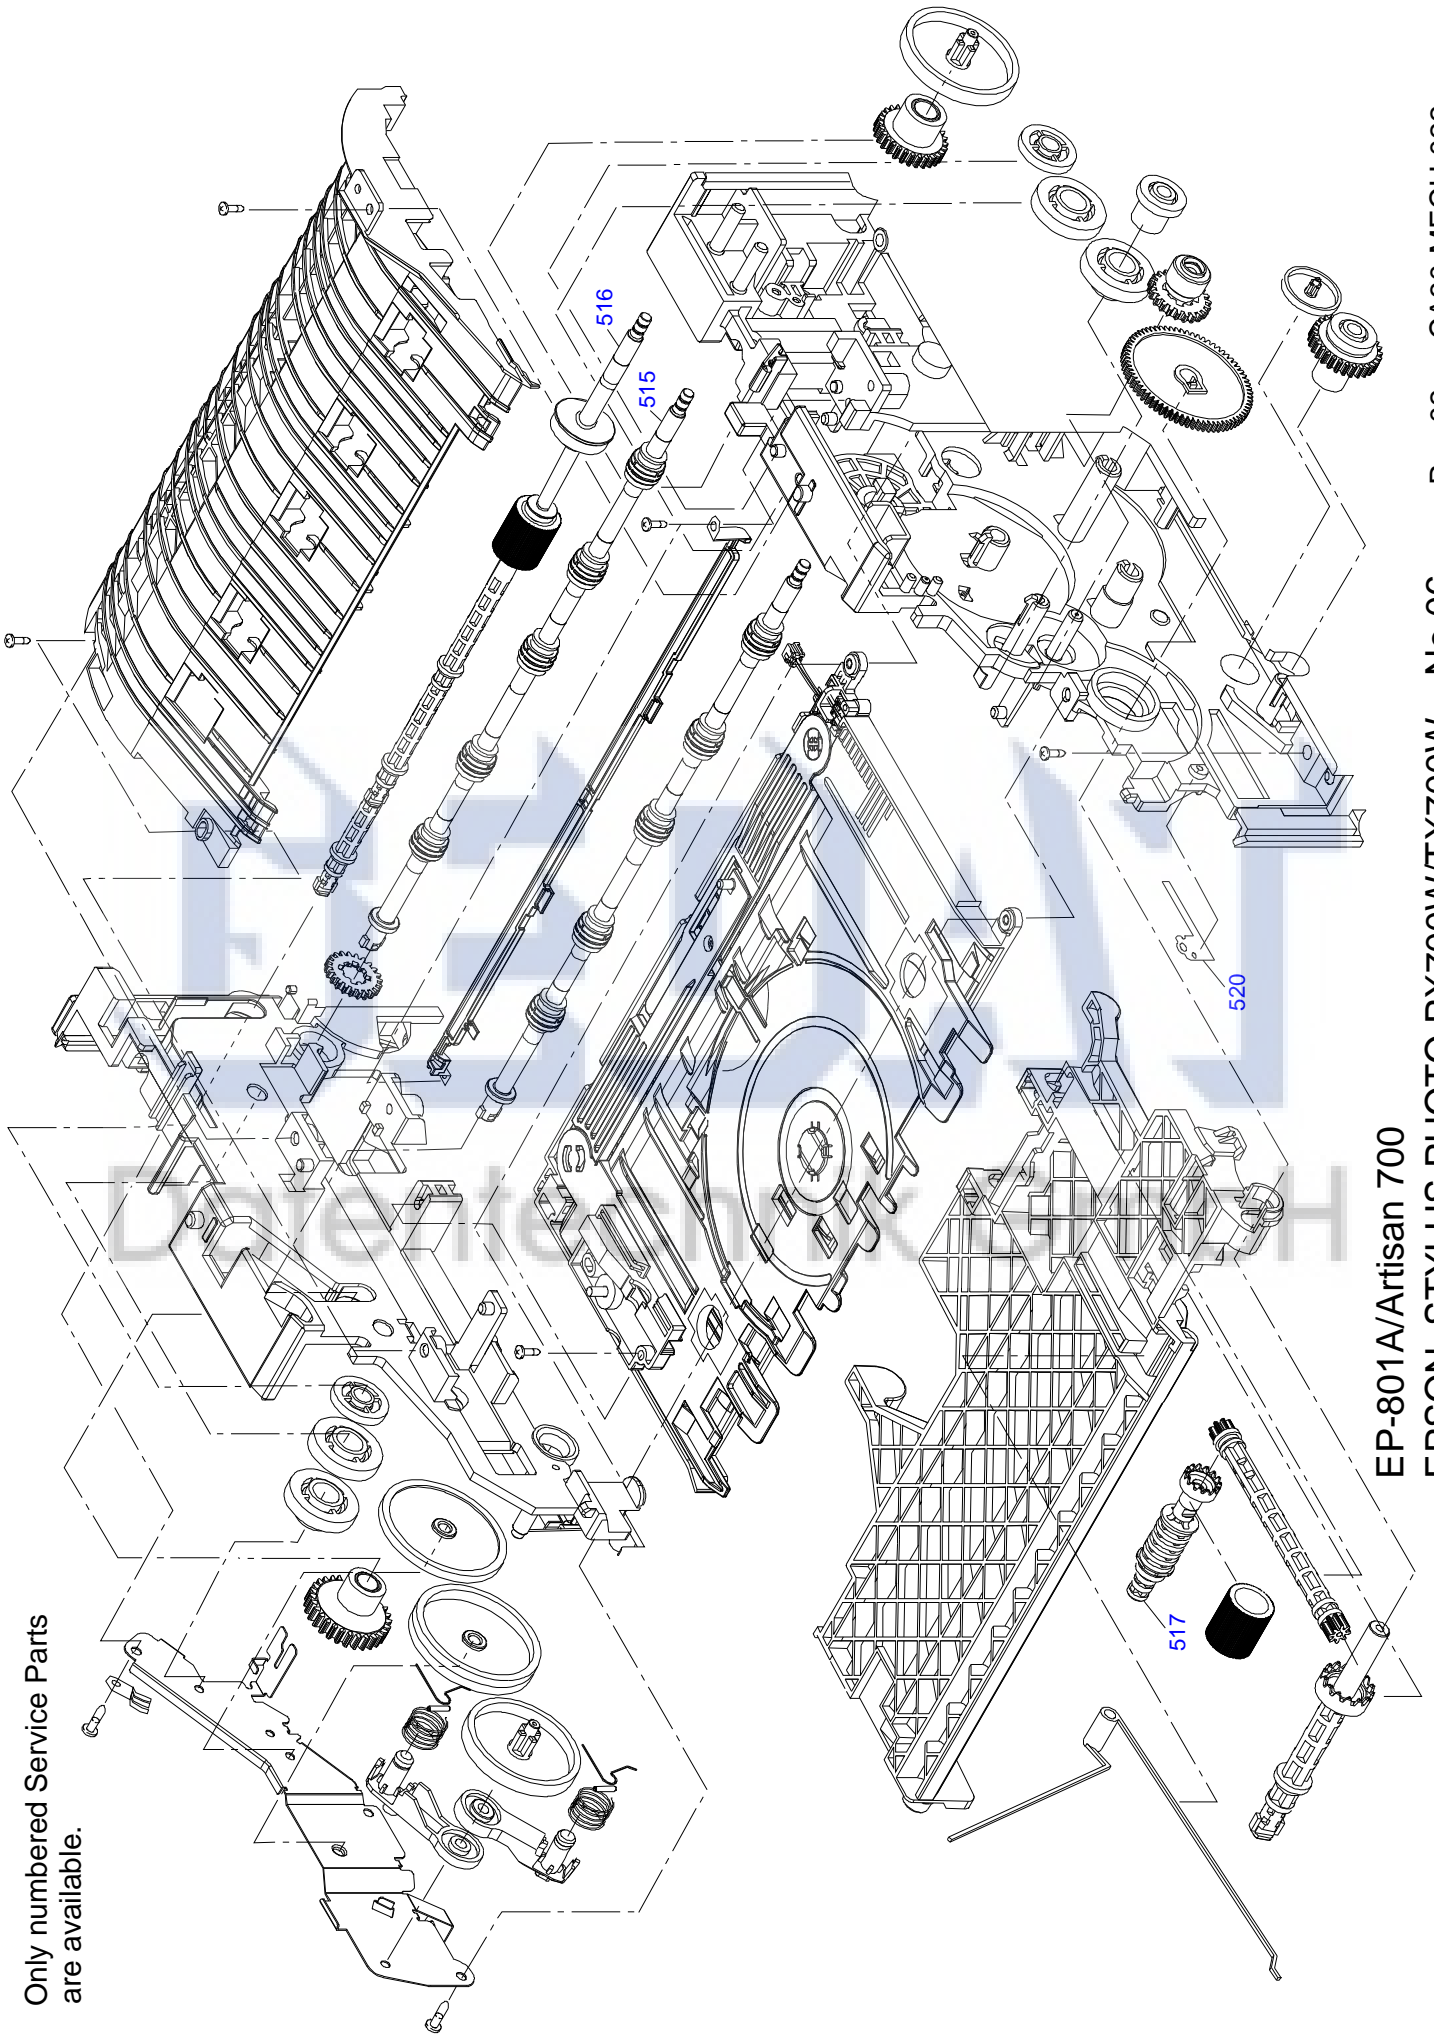


EP-801A/Artisan 700

EPSON STYLUS PHOTO PX700W/TX700W No.06

Rev.02

CA30-MECH-022

Only numbered Service Parts
are available.

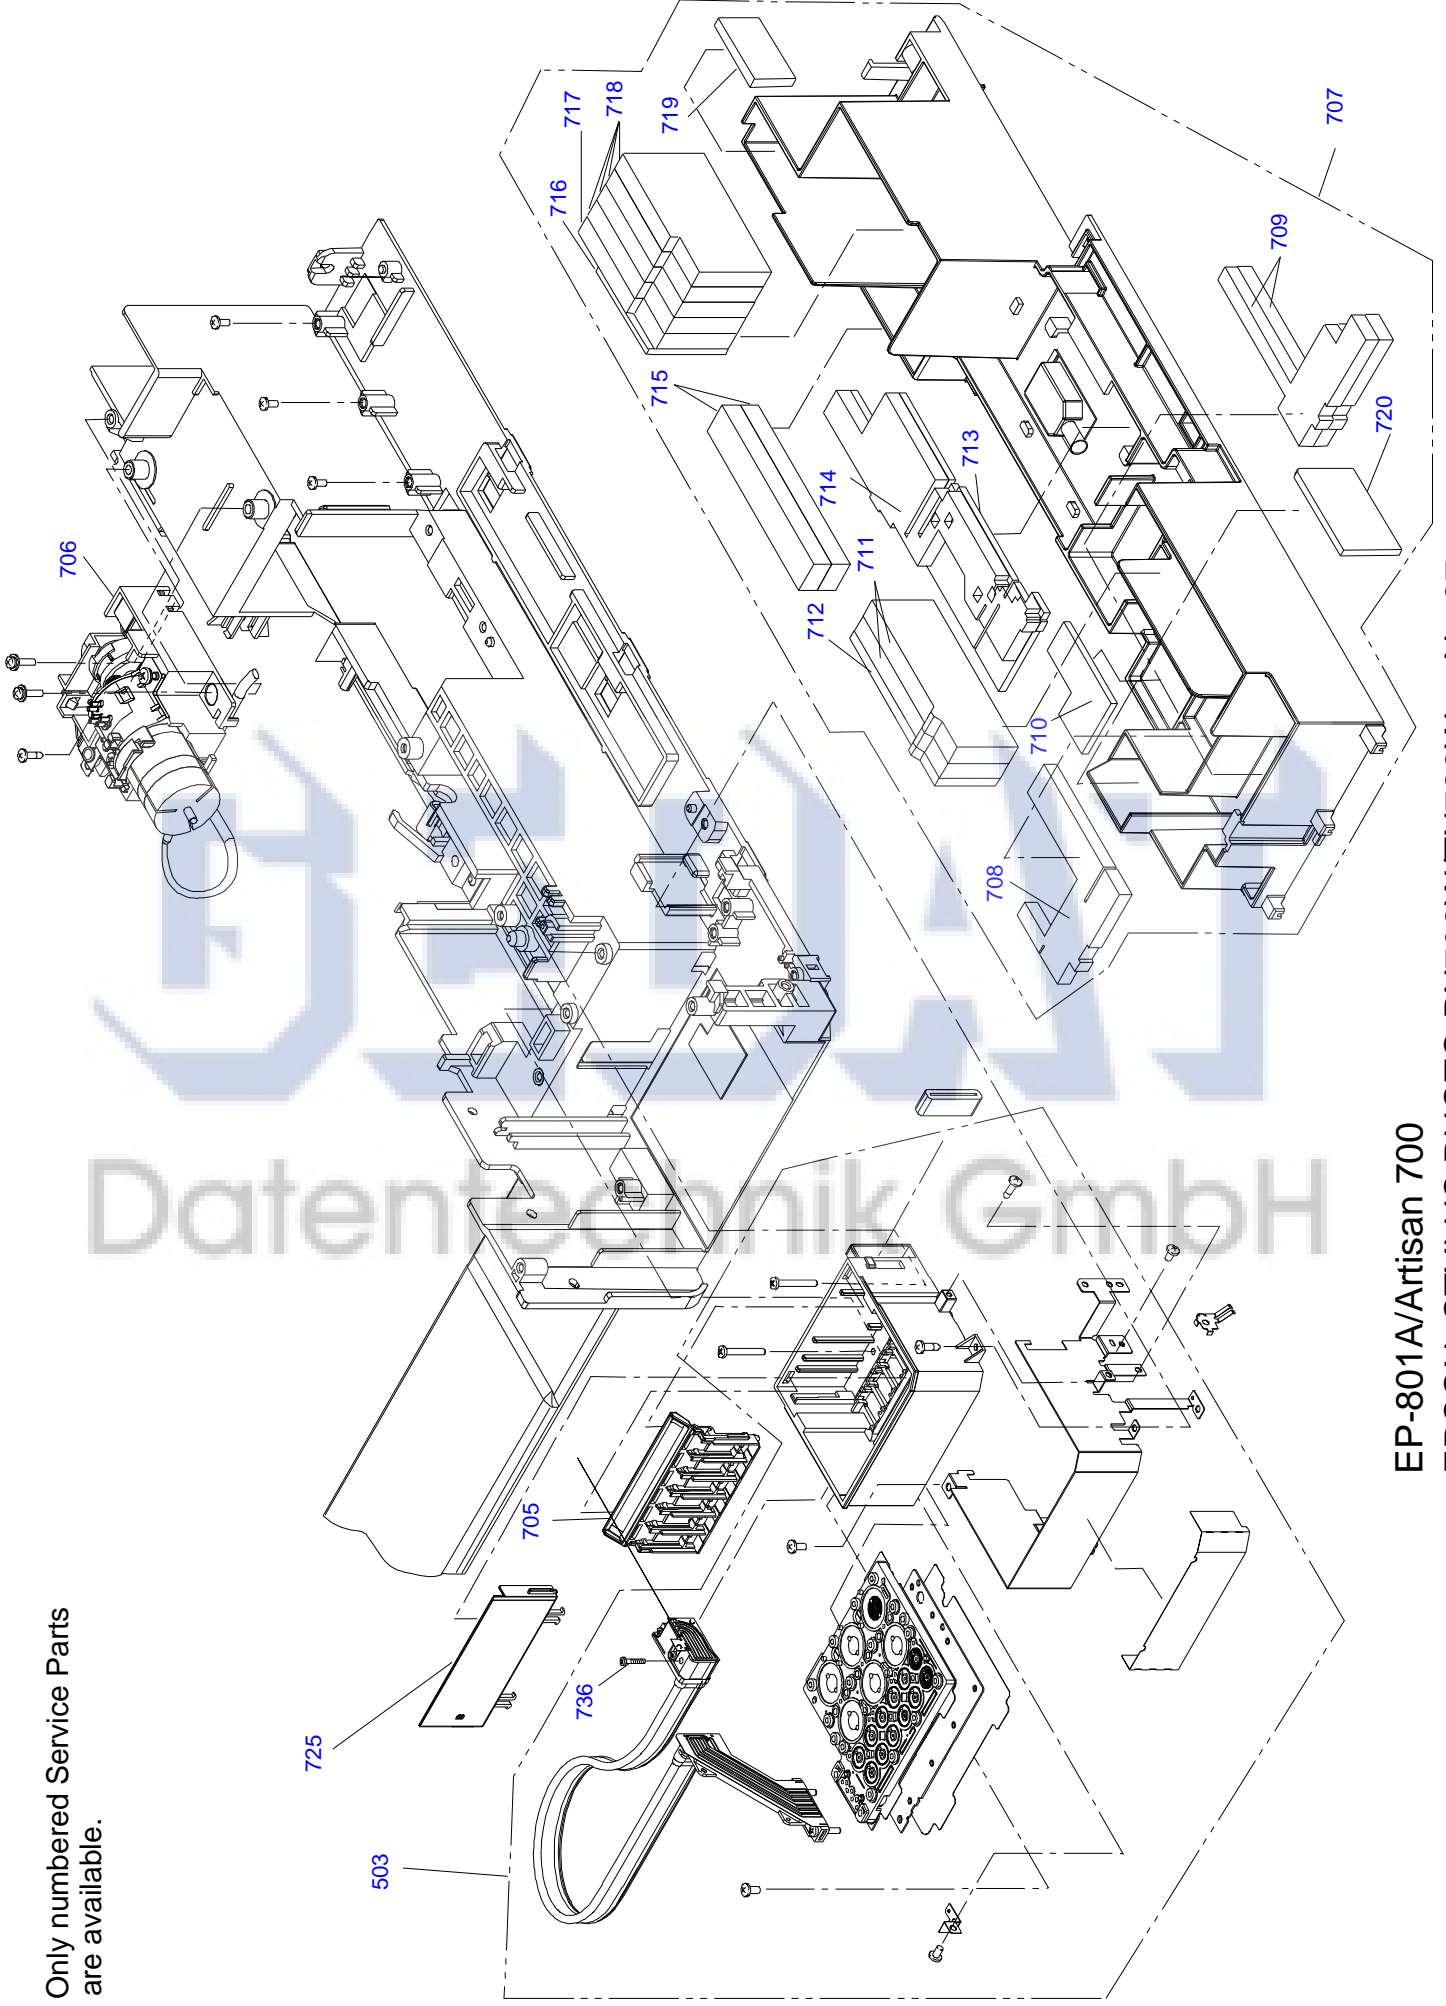

EP-801A/Artisan 700


EPSON STYLUS PHOTO PX700W/TX700W

No.07

Rev.02

CA30-MECH-032

Only numbered Service Parts
are available.

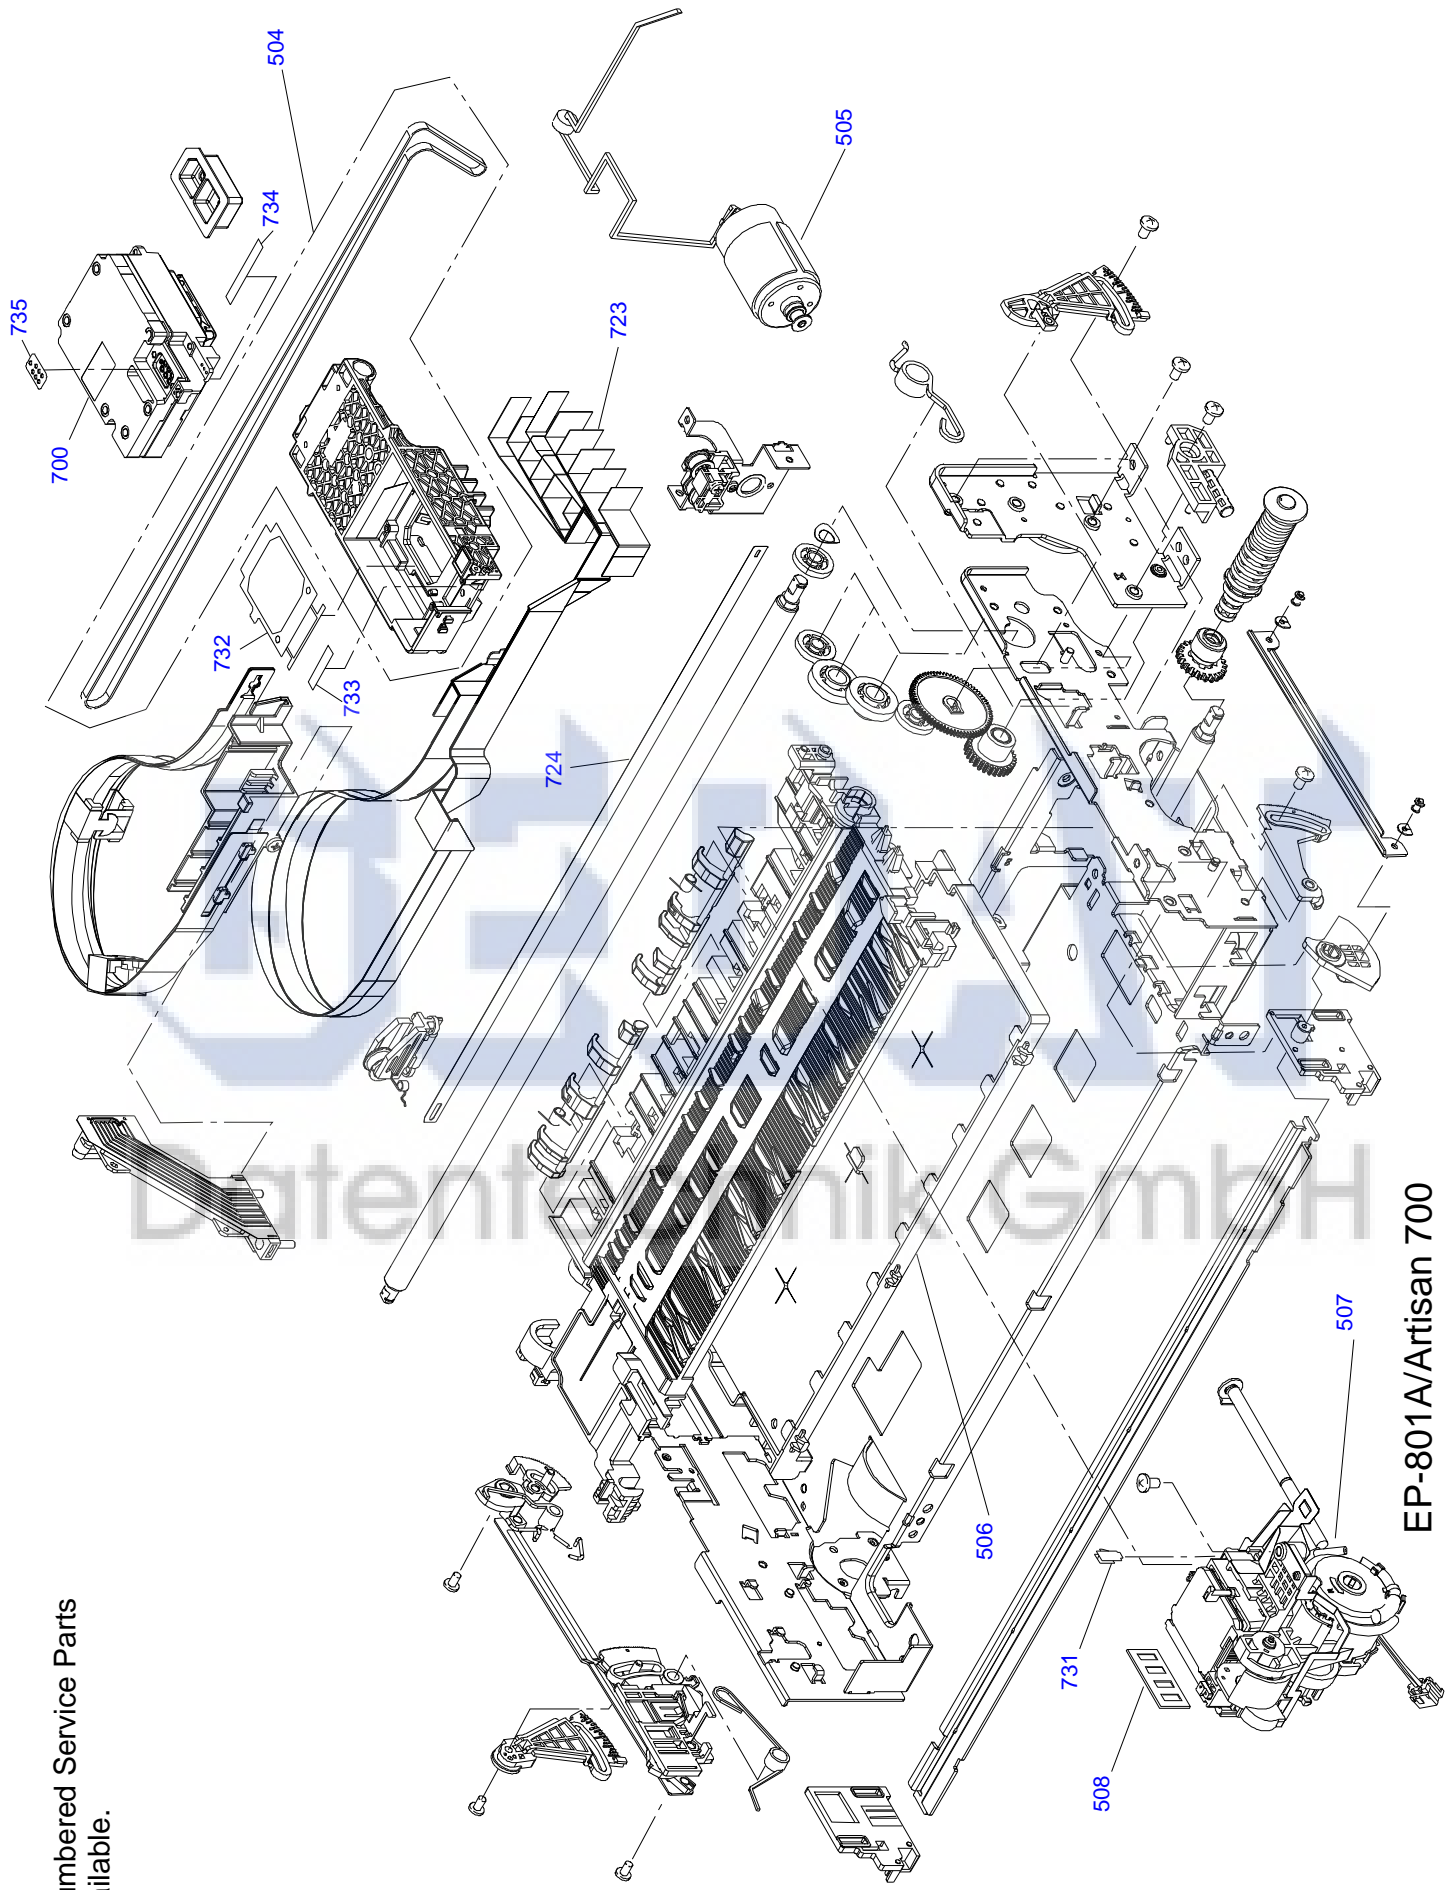

EP-801A/Artisan 700


EPSON STYLUS PHOTO PX700W/TX700W

No.08

Rev.03

CA30-MECH-043

Only numbered Service Parts
are available.

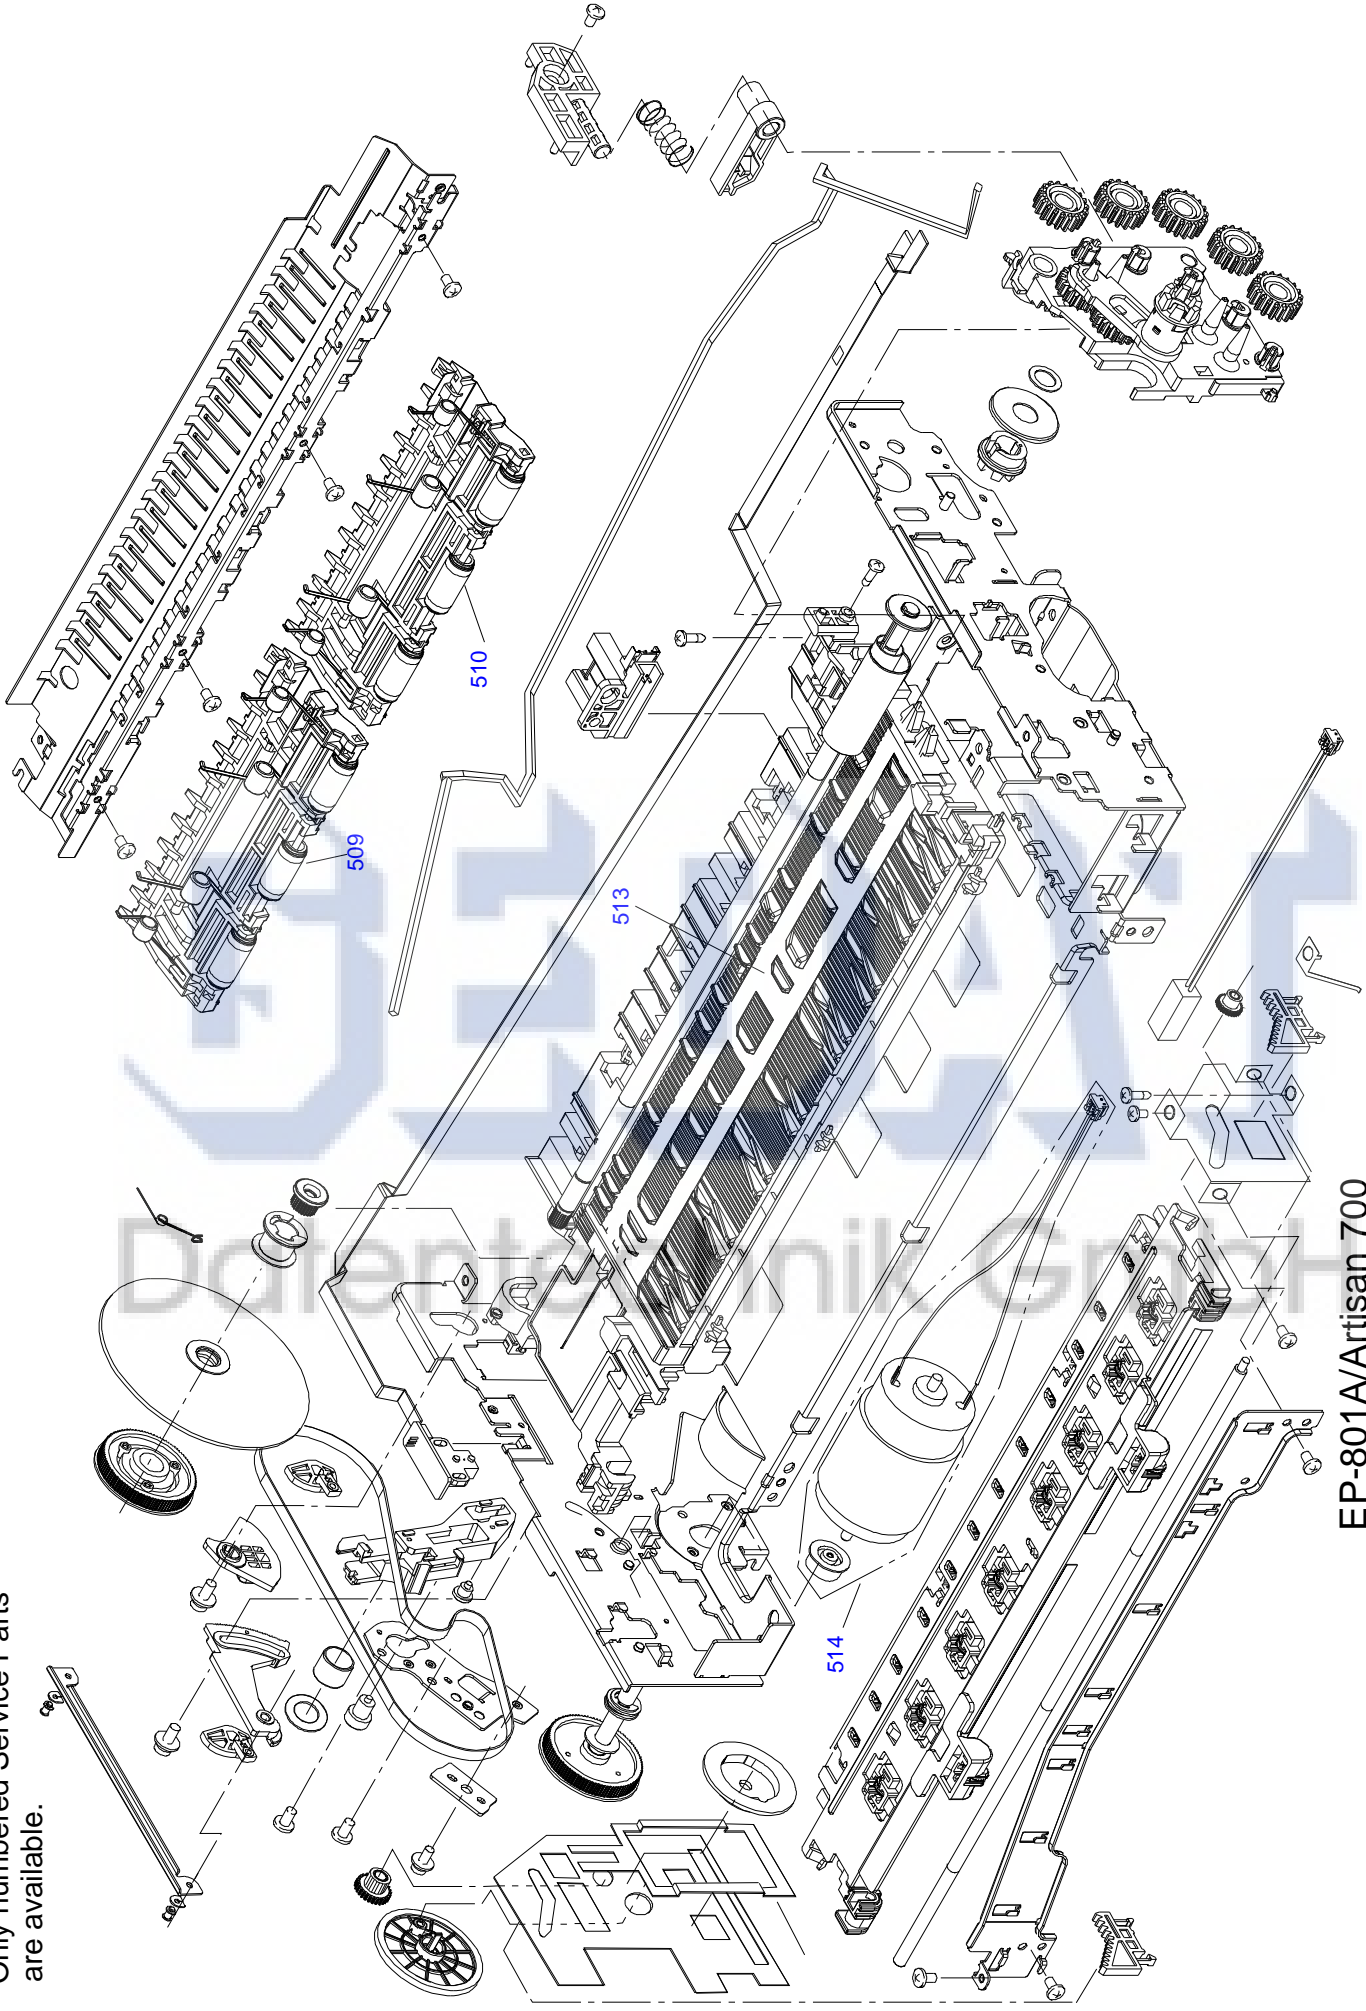

EP-801A/Artisan 700

EPSON STYLUS PHOTO PX700W/TX700W No.09

Rev.03

CA30-MECH-053